



IES308

8-port Unmanaged Industrial Ethernet Switch Hardware Installation Guide

Introduction:

IES308 series are a smart plug-and-play industrial Ethernet switch, which can provide economical solution for your Ethernet. Its dustproof fully sealed structure(protective case of IP30 level), over-current, over-voltage and EMC protected redundant double power input as well as built-in intelligent alarm design can help system main tenancy personnel monitor the network operation, which can work reliably in harsh and dangerous environment. IES308 series support 8 ports 10/100Base-T(X), Full/Half duplex mode, and auto MDI/MDI-X connection.

Packing List:

The IES308 switch is shipped with following items.


1. Ethernet switch IES308 (plus terminal block) × 1
2. Hardware Installation Guide × 1
3. Product Warranty Statement × 1
4. DIN-Rail setting fittings(wall mounting for optional)

Features:


1. Advanced Ethernet switch technical
2. IEEE802.3/802.3u/802.3x/802.3d, store and forward
3. 10/100M, F/H duplex, MDI/MDI-X auto negotiation
4. Broadcast storm protection
5. Relay output warning for power failure and port break alarm
6. Redundant 24VDC power input(12V~36VDC)
7. Designed for industrial applications. IP30 protection, rugged high-strength metal case

Panel Layout:


IES308 series industry Ethernet switches provide 8 TP ports.

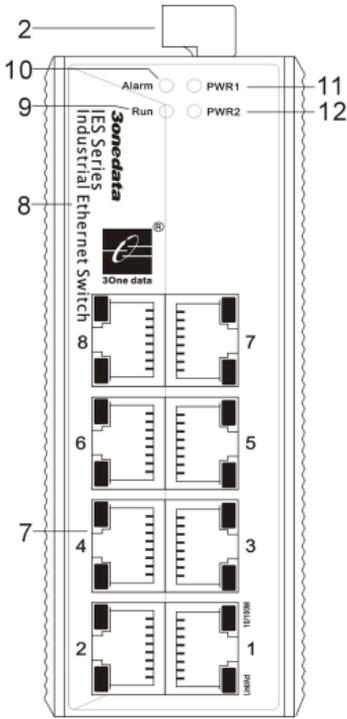

Front panel

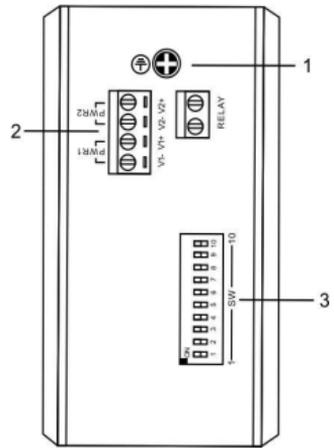


Top panel

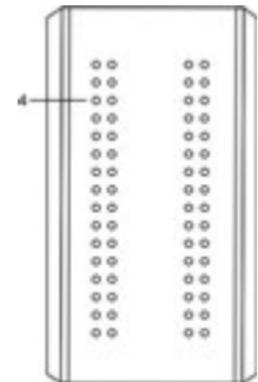


Bottom panel

1. Grounding screw
2. Terminal block (4 bits) for PWR1/PWR2 input, terminal block (2 bits) for relay output
3. power, port alarm enable switch (ON is enable)
4. Heat dissipation orifices
5. DIN-Rail locating kit
6. Screw hole for wall mounting kit
7. 10/100Base-T(X) ports
8. Corporation Logo ,Mode name
9. Facility run indication LED
10. System alarm indication LED
11. Power input PWR1 LED
12. Power input PWR2 LED

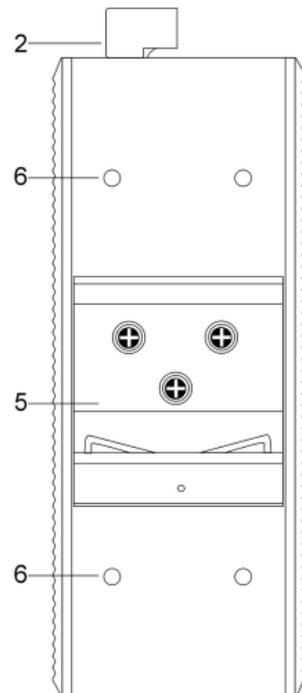

Back panel


Units (mm)

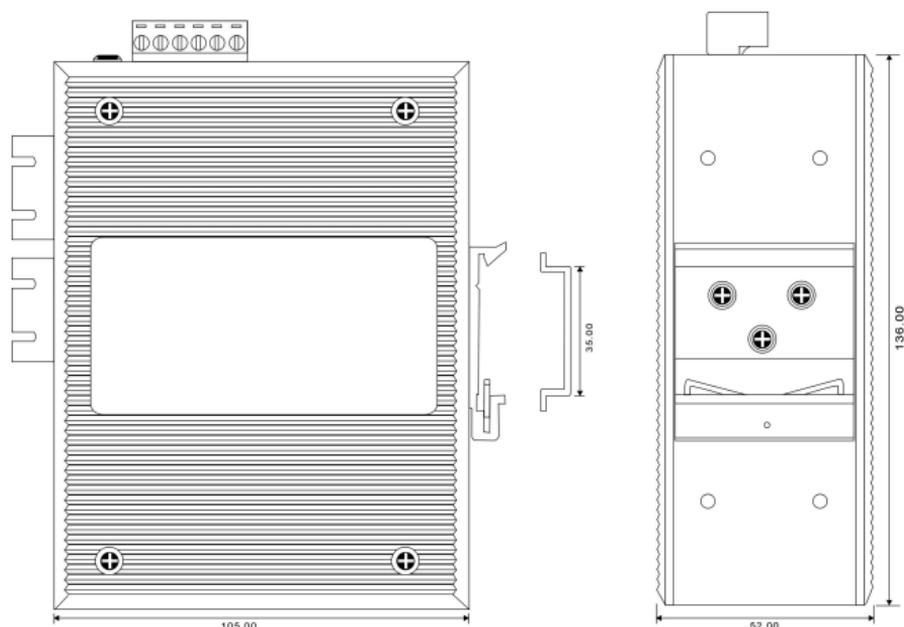**Communication connector:**


IES308 series have 5 10/100BaseT(X) Ethernet ports(RJ45)

10/100BaseT(X) Ethernet port

The pinout of RJ45 port display as below, connect by UTP or STP. The connect distance is no more than 100m. 100Mbps is used 100 Ω of UTP 5 , 10Mbps is used 100 Ω of UTP 3,4,5.

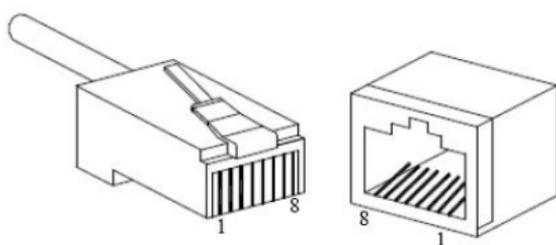


RJ45 port support automatic MDI/MDI-X operation. can connect the PC, Server, Converter and HUB .Pin 1,2,3,6 Corresponding connection in MDI. 1→3,2→6,3→1,6→2 are used as cross wiring in the MDI-X port of Converter and HUB. . 10Base-T/100Base-TX are used in MDI/MDI-X, the define of Pin in the table as below.

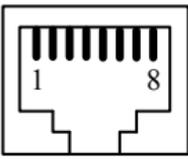


NO.	MDI signal	MDI-X signal
1	TX+	RX+
2	TX-	RX-
3	RX+	TX+
6	RX-	TX-
4,5,7,8	—	—

Note: “TX±”transmit data±, “RX±”receive data±, “—”not use

MDI(straight-through cable)

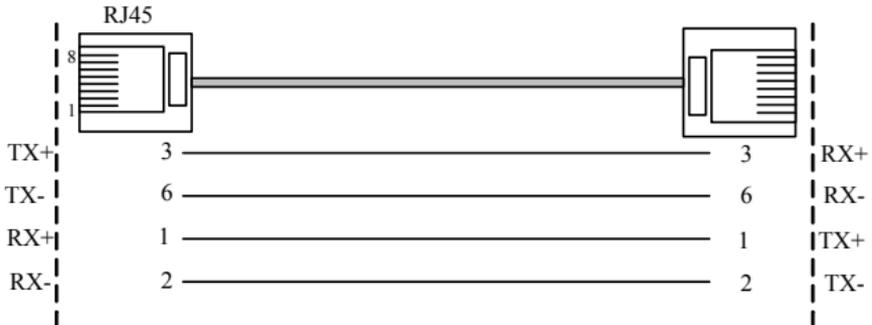

MDI-X(Cross over cable)

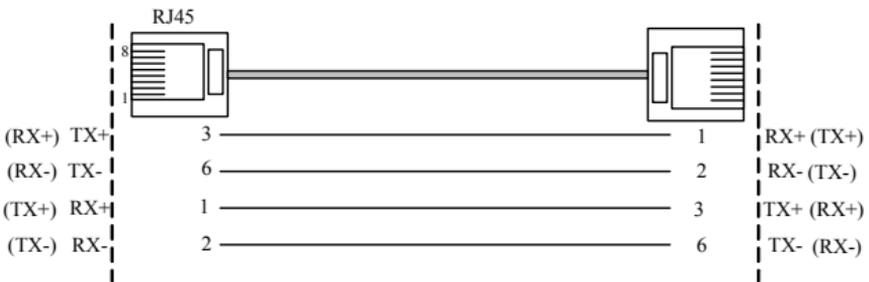


LED Indicator:

LED indicator light on the front panel of IES308 Series .the function of each LED is described in the table as below.

System indication LED		
LED	State	Description
PWR1	ON	Power1 is being supplied
	OFF	Power1 is not being supplied
PWR2	ON	Power2 is being supplied
	OFF	Power2 is not being supplied t
Alarm	ON	When the alarm is enabled, power and the port's link is inactive.

	OFF	Power and the port's link is active, not alarm
Run	ON	Common straight link mode
	OFF	disable
10/100BaseT(X) Ethernet port state LED		
10M/100M (yellow)	ON	100Mbps is active(100Base-TX)
	OFF	10Mbps is active(10Base-T)
Link/ACT (green)	ON	TP port is active
	Blinking	Data is being transmitted
	OFF	TP port is inactive

Relay contact:

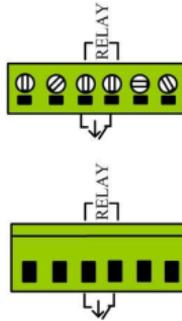


The relay consists of the two middle contacts of the terminal block on IES308 series's top panel. The two terminal block connector are used to detect both power faults and port faults. The two wires attached to the Fault contacts form an open circuit when:

(1) IES308 series have lost power from one of the DC power inputs, One of the ports for which the corresponding Port alarm DIP Switch is set to ON is not properly connected.

If neither of these two conditions occur, the alarm circuit will be closed.

Power Input:

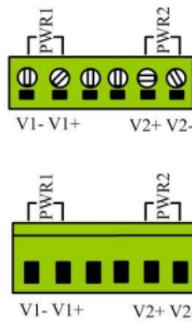

IES308 series have redundant power input, provides two terminal block (3 bits) for PWR1 and PWR2 input. The redundant power can be used single and used two self-governed power to supply to the system, PWR1 and PWR2 input at the same time, when neither of these two power fails, the other power acts as a backup, and automatically supplies power needs, ensure running Ethernet reassuring .

Switch Settings:



Provide 10 bits switch for function setting. 1 ~ 8 alarm enable switch setting. ON show enable ,9 show PWR1 alarm setting .10 show PWR 2 alarm setting . ON show alarm state.

Installation:

Before installation, confirm that the work environment meet the installation require, including the power needs and abundant space. whether it is close to the connection equipment and other equipments are prepared or not.

Installation require as below


1. Avoid in the sunshine, keep away from the heat fountainhead or the area where in intense EMI.
2. Examine the cables and plugs that installation requirements.
3. Examine whether the cables be seemly or not (less than 100m) according to reasonable scheme.
4. Screw, nut, tool provide by yourself.

5. Power need: Redundant, dual 24VDC(12VDC~36VDC)
6. Environment: -40 to 75°C
Storage Temperature: -45°C to 85°C
Relative humidity 10% to 95%

DIN-Rail Installation

In order to use in industrial environments expediently, IES308 series adopt 35mm DIN-Rail installation, the installation steps as follows:

1. Examine the DIN-Rail attachment
2. Examine DIN Rail whether be firm and the position be suitability or not .
3. Insert the top of the DIN-Rail into the slot just below the stiff metal spring.
4. The DIN-Rail attachment unit will insert into place as shown below.

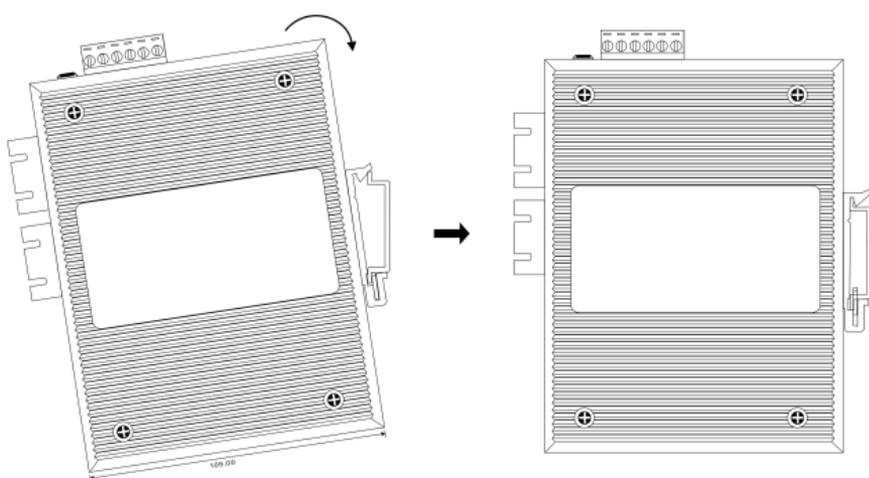

Wiring Requirements:

Be sure to disconnect the power cord before installing and/or wiring your Ethernet Switch.

Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If the current goes above the maximum ratings, the wiring could overheat may causing serious damage to your equipment. You should also pay attention to the following items:

1. Use separate path to route wiring for power and devices. If power wiring and device wiring paths must cross, make sure the

wires are

perpendicular at the intersection point.

2. NOTE: Do not run signal or communications wiring and power wiring in the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.
3. You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring that shares similar electrical characteristics can be bundled together.
4. Keep input and output wiring separated. It is strongly advised that you label wiring to all devices in the system when necessary.

Specifications:

Interface

RJ45 Ports: 10/100BaseT(X) auto connection, F /H duplex or force work mode, and support MDI/MDI-X connection , 1000V electromagnetism isolation for protection

Alarm output interface: One relay alarm output. Support power, port link and network alarm

Indicator: Power, Port link, abnormality alarm indication, 10M/100M Rate

Technology

Standards: IEEE802.3, IEEE802.3x, IEEE802.3u

Forwarding and Filtrate Rate: 148810pps

Processing type: Store and Forward

System exchange bandwidth: 4.8G

Relay

Max voltage: DC30V

Max power input: 24VA

Power

Input Voltage: 24VDC (12VDC~48VDC)

Overload Current Protection

Support dual power backup

Mechanical

Dimensions: 136mm×52mm×105mm (H×W×D)

Casing: IP30 protection, Metal case

www.texim-europe.com

Installation: DIN-Rail, Wall Mounting

Weight: 800g

Environmental

Operating Temperature: -40 to 75°C

Storage Temperature: -45 to 85 °C

Ambient Relative Humidity: 10% to 95% (non-condensing)

Approvals

EMI: FCC Part 15, CISPR (EN55022) class A

EMS: EN61000-4-2(ESD),

EN61000-4-3(RS),

EN61000-4-4(EFT),

EN61000-4-5 (Surge),

EN61000-4-6 (CS),

EN61000-4-8,

EN61000-4-11

Shock: IEC 60068-2-27

Free Fall: IEC 60068-2-32

Vibration: IEC 60068-2-6

Warranty: 5 years

Certifications:



3onedata

Shenzhen 3onedata Technology Co.,Ltd

Tel: +86-755-26702688 Fax: +86-755-26703485

www.3onedata.com
www.texim-europe.com

The Netherlands



Elektrostraat 17
NL-7483 PG Haaksbergen

T: +31 (0)53 573 33 33
F: +31 (0)53 573 33 30
E: nl@texim-europe.com

Belgium



Zuiderlaan 14 bus 10
B-1731 Zellik

T: +32 (0)2 462 01 00
F: +32 (0)2 462 01 25
E: belgium@texim-europe.com

UK & Ireland



St. Mary's House, Church Lane
Carlton Le Moorland
Lincoln LN5 9HS

T: +44 (0)1522 789 555
F: +44 (0)845 299 22 26
E: uk@texim-europe.com

Germany North



Bahnhofstrasse 92
D-25451 Quickborn

T: +49 (0)4106 627 07-0
F: +49 (0)4106 627 07-20
E: germany@texim-europe.com

Germany South



Martin-Kollar-Strasse 9
D-81829 München

T: +49 (0)89 436 086-0
F: +49 (0)89 436 086-19
E: germany@texim-europe.com

Austria



Warwitzstrasse 9
A-5020 Salzburg

T: +43 (0)662 216 026
F: +43 (0)662 216 026-66
E: austria@texim-europe.com

Nordic region



Sdr. Jagtvej 12
DK-2970 Hørsholm

T: +45 88 20 26 30
F: +45 88 20 26 39
E: nordic@texim-europe.com

General information



info@texim-europe.com
www.texim-europe.com